

Front Load Maytag Washer Advisory

Please DO NOT force washer door open on Maytag Front loader washers!

If washer is taking longer than displayed time to complete cycle it is trying to “correct” either an oversuds or an off balance condition.

The washer will try to correct the problem by adding water or redistributing the load.

The washer **will stop and allow the door to open on its own** after it has tried to correct the problem.

The washer can also be unplugged and door will open after 3 minute waiting period if the problem persists.



Use only ¼ cup of detergent

The front load washers use less water so less soap is required.

If you use the detergent tablets break them in half and place in the tub with clothes.



For Service or to report a problem go to <http://laundry.oneonta.edu> or call ext. 3352